



Einhell

EXPERT

POWER X-CHANGE

Cordless Pruning Saw

GE-GS 18/150 Li-Solo

Item No.: 3408290

Ident No.: 21011

Bar Code: 400682566649

The Einhell GE-GS 18 Li - Solo cordless tree pruning saw is a reliable helper in the garden. Thanks to its high-quality features the cordless tree pruning saw with a blade length of 150 millimeters will even cut through very thick branches with diameters of up to 90 millimeters effortlessly. The saw blade on the Einhell cordless tree pruning saw can be changed quickly and easily because no tools are required to do so. The removable branch handle enables branches to be cut easily in every situation and therefore contributes to tireless working and a perfectly firm hold. The GE-GS 18 Li – Solo cordless tree pruning saw is equipped with a high-quality KWB saw blade "Made in Switzerland". The battery and charger are available separately.

Features & Benefits

- Member of the Power X-Change family, 1x 18V battery required
- Reliable helper for sawing branches (trees and bushes)
- Effortless cutting of branches up to 10 cm thickness
- Tool-free, easy saw blade change
- Cover of the saw blade holder for protection
- Incl. branch handle for easy and one-handed sawing
- Quick and easy remove of branch handle
- Vibration-decoupled battery holder to protect the battery
- Softgrip for comfortable working and perfect grip
- Belt clip for optimal working comfort
- Incl. 2x kwb quality saw blade "Made in Switzerland"
- Supplied without battery and without charger (sold separately)



Technical Data

- Saw blade length 150 mm
- Cutting depth without branch handle 100 mm
- Cutting depth with branch handle 80 mm

Logistic Data

- Product weight (kg) 1.14
- Gross weight (kg) 1.9
- Dimensions single packaging 378 x 130 x 115 mm
- Pieces per export carton 6 Pieces
- Gross weight of export carton 11.9 kg
- Container quantity (20"/40"/40"HC) 4200 | 8400 | 9240



Available as special accessories



2x 3,0Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512083
Bar Code: 4006825638509
Einhell Accessory



18V 4-6Ah Multi-Ah PXC Plus
Battery
Item No.: 4511502
Bar Code: 4006825644210
Einhell Accessory



18V 2,5Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512097
Bar Code: 4006825646962
Einhell Accessory



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



2x2 Power X-Quattrocharger 4A
Charger
Item No.: 4512102
Bar Code: 4006825649536
Einhell Accessory



18V 2,5Ah Power X-Change
Battery
Item No.: 4511516
Bar Code: 4006825650518
Einhell Accessory



Power X-Fastcharger 4A
Charger
Item No.: 4512103
Bar Code: 4006825650228
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



2x 5,2Ah & Twincharger Kit
PXC-Starter-Kit
Item No.: 4512108
Bar Code: 4006825652376
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



18V Battery Charger 3,0A - PXC
Charger
Item No.: 4514095
Bar Code: 4006825655292
Einhell Accessory



Power X-Car Charger 3A
Charger
Item No.: 4512113
Bar Code: 4006825655377
Einhell Accessory



2x 4,0Ah & Twincharger Kit 1
PXC-Starter-Kit
Item No.: 4512112
Bar Code: 4006825655766
Einhell Accessory



2x 18V 2,5Ah PXC-Twinpack CB
Battery
Item No.: 4511524
Bar Code: 4006825656206
Einhell Accessory



2x 18V 5,2Ah PXC-Twinpack
Battery
Item No.: 4511526
Bar Code: 4006825656695
Einhell Accessory



5,2Ah & 4A Fastcharger
PXC-Starter-Kit
Item No.: 4512114
Bar Code: 4006825656787
Einhell Accessory



2x18V 4,0Ah PXC-Twinpack CB 1
Battery
Item No.: 4511489
Bar Code: 4006825638578
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 4,0Ah Power-X-Change Plus
Battery
Item No.: 4511553
Bar Code: 4006825660869
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 3,0Ah Power X-Change Plus
Battery
Item No.: 4511501
Bar Code: 4006825644197
Einhell Accessory



Power X-Caravan Charger 3A
Charger
Item No.: 4512136
Bar Code: 4006825664010
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory



18V 5-8Ah Multi-Ah PXC Plus
Battery
Item No.: 4511600
Bar Code: 4006825665055
Einhell Accessory



18V 4-6Ah & 6A Boostcharger
PXC-Starter-Kit
Item No.: 4512143
Bar Code: 4006825667653
Einhell Accessory

Battery-Running-Times



One Battery for All

cutting¹
(pieces)

1.5 Ah	70
2.0 Ah	90
2.5 Ah	115
3.0 Ah	140
4.0 Ah	180
5.2 Ah	240
6.0 Ah	280
8.0 Ah	360

Test setup:

1) wood - round wood Ø 60 mm